


Dremel DigiLab (Software for Dremel 3D20)

Last Revised 8.15.2019

MakerspaceURI Robert L. Carothers Library (Room 165)

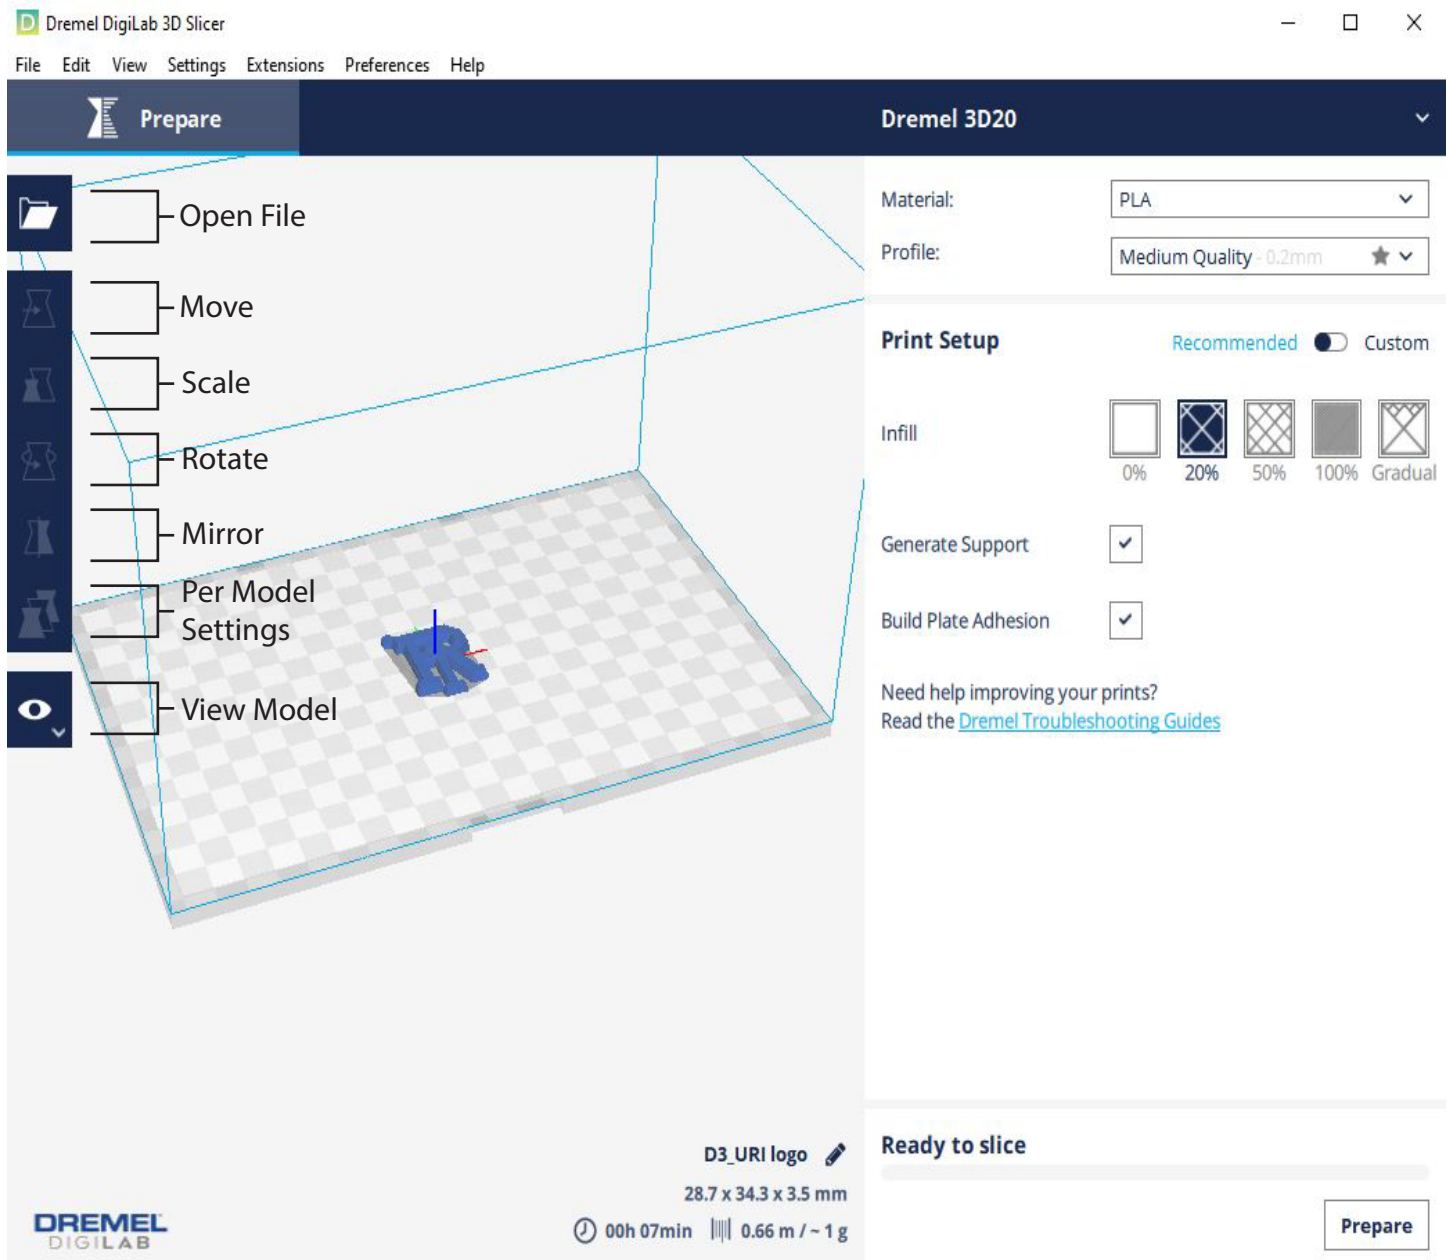

1. Open Dremel DigiLab software
2. Insert .stl file by selecting Open File icon on left tool bar and selecting file
3. To edit the model use toolbar on left side of the screen
4. To edit print quality and print set up use toolbar on right side of the screen
5. To duplicate model, right click mouse and select Multiply Selected
6. Once satisfied with settings click Prepare on the bottom right side of screen
7. Click Save to File and select desired usb drive to save file to for printing
8. Wait for file to export saying Saved
9. Remove usb drive and move to Dremel 3D20